

Better Music Builder[®].com



SPEAKON DIAGRAM

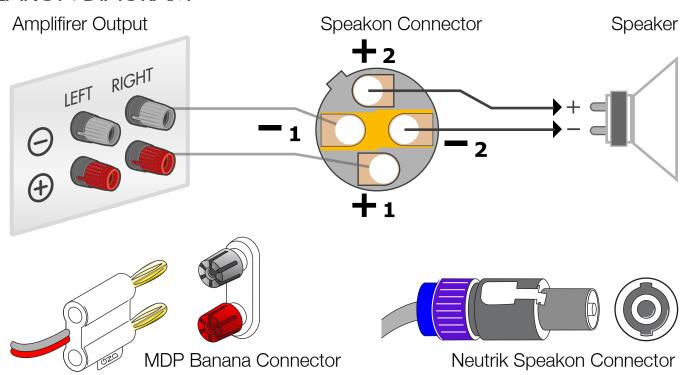




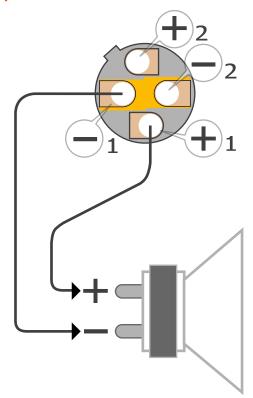


The postive one and nagetive one connect correctly to the speaker.

Wrong Connection

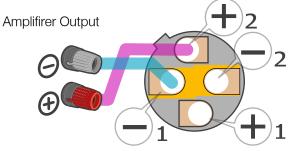

The postive and nagetive are not connected on the same set.

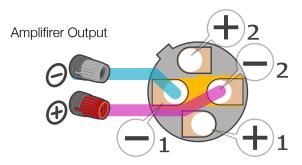

The postive misconnected to the nagetive which will not work.